




Installation process

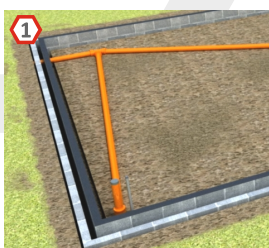


Build up the foundation walls to the desired height & install a suitable damp proof course

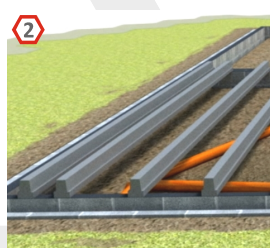


Using the beam layout provided, carefully place the beams across the floor at the specified centres

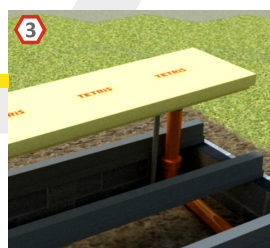


Using layout provided, install the first full length block of **TETRIS**

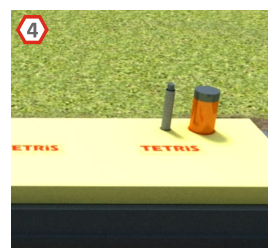


Cut holes for services with a hand saw

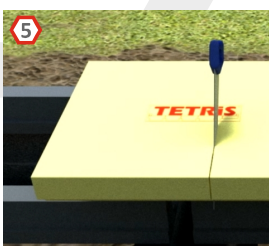


TETRIS blocks can be cut to size with a hand saw

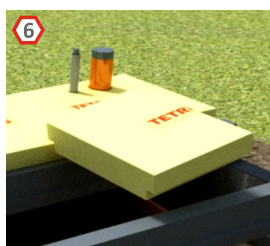


Use the cut off from the previous row to start the next one

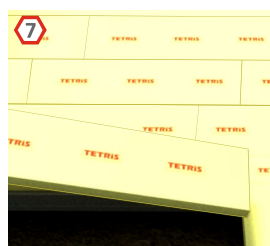


Install the **TETRIS** boards in a staggered formation

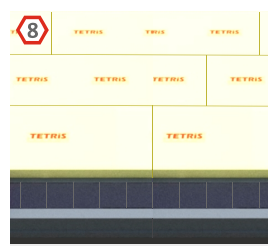


Where beams are set at centres that do not suit a "T" board, install a concrete block and cover with **Gap Strip**

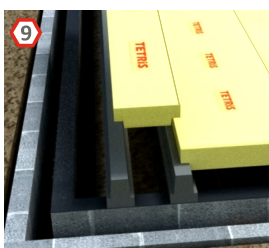


Where required, install T300 boards

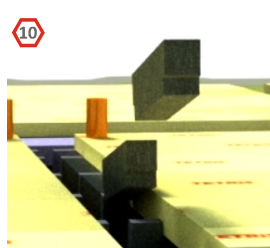


Fill the gaps between the beams with concrete closer blocks and slip bricks

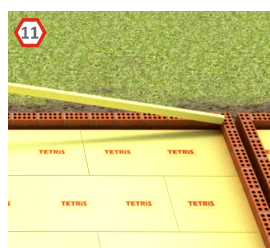

Install the **TETRIS Vertical Edge Strips** around the external perimeter of the floor

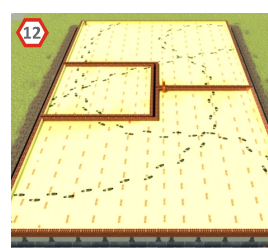

During the installation process **TETRIS** is strong enough to be walked upon should an underfloor

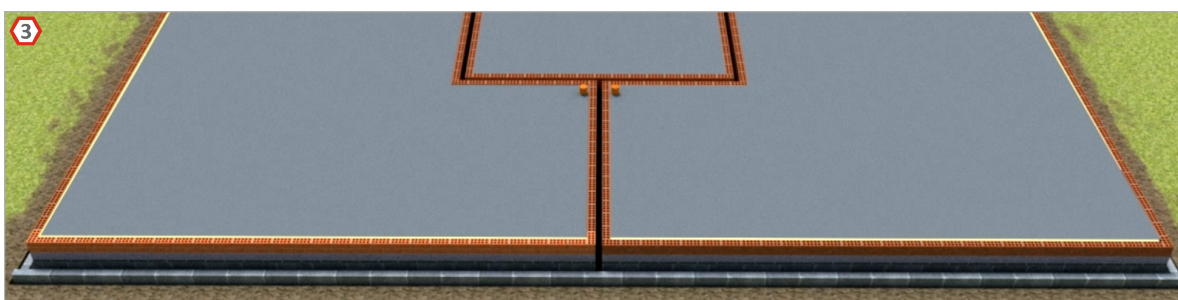

Carefully pour the desired concrete topping to a minimum depth of 75mm. Power float the concrete to produce a floor with outstanding thermal performance and structural integrity.

Watch the Online Installation Video

Watch a step-by-step installation video online at www.cellecta.co.uk or via your smart phone by downloading the FREE **CELLECTA** app. For additional technical advice for your project contact **CELLECTA** on 01634 29-66-77 or email tetris@cellecta.co.uk



12



01634 29-66-77



cellecta.co.uk



tetris@cellecta.co.uk